


HAND CRIMP TOOL **SPECIFICATION SHEET** Order No. 63811-1600

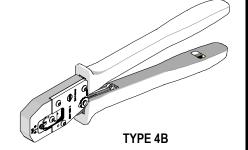

FEATURES


- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomically designed soft handles
- Precisely designed crimping profiles with simple contact positioning
- Easy handling due to outstanding force ratio

SCOPE

Products: 10.00mm (.394") Pitch Mini-Fit Sr. ™ Crimp Terminals, 10-12 AWG.

Terminal	Terminal Order No.			Wire Size		Insulation Diameter		Strip Length	
Series No.	Loose Piece	*Reel		AWG	mm²	mm	ln.	mm	ln.
42815		42815-0010	42815-0011	10-12	5.00-3.30	3.50-5.30	.138209	7.49-8.51	.295335
		42815-0012	42815-0018						
42817		42817-0010	42817-0011	10-12	5.00-3.30	3.50-5.30	.138209	7.49-8.51	.295335
		42817-0012	42817-0018						
		42817-0019	42817-0110						
		42817-0111	42817-0112						
*Customer to cut off terminal from reel: 0.5mm (.020") maximum Cut-off Tab.									

DEFINITION OF TERMS

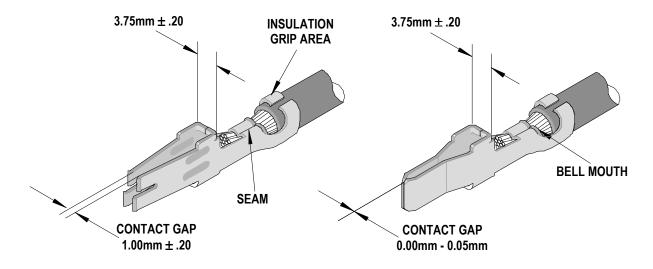

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

UNCONTROLLED COPY Doc No: ATS-638111600 Release Date: 08-20-01 Page 1 of 4 Revision Date: 10-16-08

Revision: G

CONDITIONS:

After crimping, the crimp profiles should measure the following (see notes on page 3).


Tarminal	Wire Size		Conductor Crimp			Insulation Crimp		Pull Force		Profile		
Terminal Series No.			Height (Ref)		Width (Ref)		Width (Ref)		Minimum		1 TOTHE	
001103 110.	AWG	mm²	mm	ln.	mm	ln.	mm	ln.	N	Lb.	10	12
42815	10	5.00	2.69-2.79	.106110	3.60	.142	5.80	.228	356.0	80.00	Χ	
	12	3.30	2.39-2.49	.094-098	3.60	.142	5.40	.213	311.0	70.00		Χ
42817	10	5.00	2.69-2.79	.106110	3.60	1.42	5.80	.228	356.0	80.00	Χ	
	12	3.30	2.39-2.49	.094-098	3.60	.142	5.40	.213	311.0	70.00		Χ

OPERATION

Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.

Crimping Terminals

- 1. Place the terminal into the correct die profile (10 or 12) until the terminal stopped by the locator.
- 2. Partially close the tool until the terminal is held in place.
- Place a pre-striped wire into the terminal and align the wire with the conductor and insulation grips visually. See Figure 1.
- 4. Close the tool until the ratchet releases.
- 5. Carefully remove the crimped terminal.

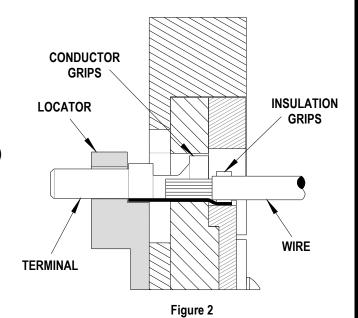

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- 1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
- 2. Do not use any abrasive materials that could damage the tool.
- 3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively. The tool was engineered for durability but like any other equipment it needs cleaning and lubrication for a maximum service life of trouble free crimping. Light oil (such as 30 weight automotive oil) used at the oil points, every 5,000 crimps or 3 months, will significantly enhance the tool life.
- 4. Wipe excess oil from hand tool, particularly from crimping area. Oil transferred from the crimping area onto certain terminations may affect the electrical characteristics of an application.
- 5. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies, and store the tool in a clean, dry area.

Doc No: ATS-638111600 Release Date: 08-20-01 **UNCONTROLLED COPY** Page 2 of 4 Revision: G Revision Date: 10-16-08

Miscrimps or Jams (See Figure 3)

Should this tool ever become stuck or jammed in a partially closed position, Do Not force the handles open or closed. The tool will open easily by rotating the slotted screw on the locator (back) side of the hand tool. See Figure 3.

Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, we will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only. Any clamping, fixturing, or use of handle extensions voids this warranty.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals and tooling.

CAUTIONS:

- 1. Manually powered hand tools are intended for low volume or field repair. This tool is NOT intended for production use. Repetitive use of this tool should be avoided.
- 2. Insulated rubber handles are not protection against electrical shock.
- 3. Wear eye protection at all times.
- 4. Use only the Molex terminals specified for crimping with this tool.

Notes:

Revision: G


- 1. This tool should only be used for the terminals and wire gauges specified on this sheet.
- 2. This tool is not adjustable. Variations in tools, terminals, wire stranding, and insulation types may affect crimp
- 3. This tool is intended for standard conductor sizes. It may not give a good insulation crimp support for all insulation sizes.
- 4. Molex does not repair hand tools (see warranty above). The replacement parts listed are the only parts available for repair. If the handles or crimp tooling is damaged or worn, a new tool must be purchased.
- 5. Pull force should be used as the final criteria for an acceptable crimp. Pull force is measured with no influence from the insulation crimp. Refer to Molex Quality Crimping Handbook 63800-0029 for additional information on crimping and crimp testing.
- 6. Molex does not certify crimp hand tools.
- 7. Hand held crimping tools are intended for low volume, prototyping, or repair requirements only.

CAUTION: Repetitive use of this tool should be avoided.

UNCONTROLLED COPY Doc No: ATS-638111600 Release Date: 08-20-01 Page 3 of 4 Revision Date: 10-16-08

PARTS LIST

Item Number Order Number		Description	Quantity	
1	63811-1575	Locator	1	

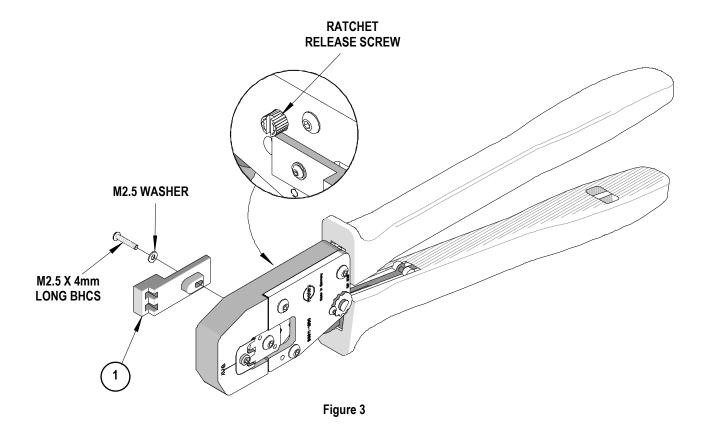

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-638111600 Release Date: 08-20-01 **UNCONTROLLED COPY** Page 4 of 4 Revision: G Revision Date: 10-16-08