







How to change filter

- Carefully lift out the filter keeping disruption to a minimum.
- Insert used filter into a plastic bag or box and dispose of properly.
- Slide new filter into the top of the unit until the fan is fully covered.

Location and mounting

- Mount unit on a stable work surface equipped with an ac power
- Locate unit 6" to 8" (152 to 203mm) from work area.

Maintenance

- Unplug unit.
- Remove filter from unit carefully.
- Using a small brush clean fan and housing, being careful not to breath in the dust.
- Make sure that the fan blades spin freely.

CAUTIONS

This equipment is for industrial/laboratory use.

Indoor use only.

Altitude up to 6561 FT (2000 meters).

Maximum RH of 80% up to 88°F (31°C) decreasing 50% RH at 104°F (40°C).

Pollution degree 2 in accordance with IEC644.

Installation category II.

Temperature range 41°F (5°C) to 104°F (40°C)

The user must be aware that if the equipment is used in a manner not specified by the mounfacturer, safety may be impaired.

If the supply cord is damaged, or servicing is required, this work must be carried out by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.



134 Marbledale Road, Tuckahoe, NY 10707 Tel 914.793.0700 | Fax 914.793.4527 | jonard.com

P/N 15183 REV .G

EP JONARDTOOLS®



Fume Absorber Instruction Manual









